

PLACE PIN HERE



SERVICE BULLETIN



CERTAINTY: IN CONCRETE

SAFETY FIRST: Always remove keys and lock off power before carrying out any maintenance


CHAIN OILER

Keep your conveyor lubricated

The chain oiler will keep your conveyor chain rust free and well lubricated

The oiler should operate at a rate of one drip per second

To alter the drip rate, use the adjustable screws on top of the drip control

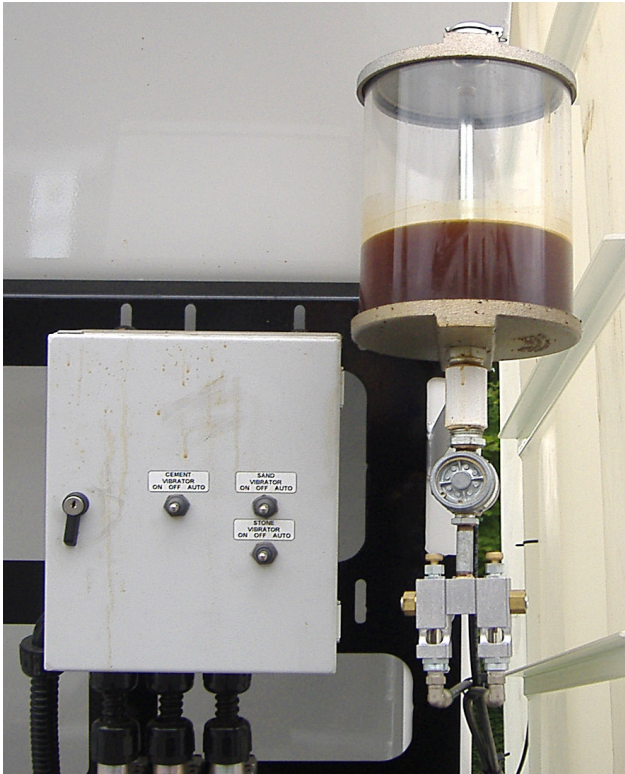

If the sight glasses fill with oil, it may be a sign that the drip rate is excessive

TECH TIP
Check the oiler daily, to maintain a consistent drip rate and fill level



www.youtube.com/user/armcontechtips

SERVICE LINE : 01625 856 699

www.armcon.com

service@armcon.com